



We'd like to thank you for purchasing a *ShuttleSlide* product. We value your business and pride ourselves on superior craftsmanship and customer support. If there are any questions this document fails to answer clearly, please do not hesitate to contact us. We will respond in most cases within a few minutes and never longer than 24 hours.

Email us at support@shuttleslide.com or call us via phone M-Sa 9-5PM EST: 321.345.3315

This document will cover a typical installation scenario for a **BMAP-RE**. However, every boat is unique and sometimes requires customized installation. As such, there will be variations that are possible that can't be discussed within the scope of these instructions. If you need help, please reach out to us and we will help with any questions you may have. **We strongly suggest you read through these instructions fully before you begin the installation or operate the mount.**

The BMAP-RE will be attached to the top of the sliding metal brackets. The back of the metal plate (inboard side) will be in line with the back of the sliding brackets. The front of the plate (rub rail side) will extend out past the front of the brackets. Please refer to the following pictures that show how the plate is placed on the sliding brackets. Please note* - you will have extra hardware left over.

Scenario #1: If you are only bolting your trolling motor directly to the BMAP-RE (no RTA-54 / RTA-17 quick release puck), you will be using:

1/4 x 20 - 1" button head bolts (2 are used in the back holes and 2 in front holes)
1/4 x 20 - 1 1/4" button head bolts (all 4 are used to attach the trolling motor to the BMAP-RE plate and also through the holes in the metal brackets -- 2 are used on each side of the motor)
You will not need the six small 3/4" flathead bolts. You will not need the six 3/4" button head bolts**

Scenario #2: If you are bolting a RTA-54 or RTA-17 quick release puck to the BMAP-RE plate, you will be using:

1/4 x 20 - 3/4" flathead bolts (6 are used to attach the BMAP-RE metal plate directly to sliding brackets)

4 - 2" flathead bolts to attach the quick release puck to the BMAP-RE

You will not need the other 8 button head bolts listed in scenario #1.

You will not need the six 3/4" button head bolts**

You can use the bolts that came with the quick release puck to attach the small puck directly to the BMAP-RE (they may be longer than needed, so you may need to cut them down so they do not hit the top of the ShuttleSlide mount or you can use the 2" flathead bolts we sent). If the locking nuts that came with your quick release install kit are too big/thick to use under the

Visit us at: <https://www.shuttleslide.com>


Contact us at: Support@shuttleslide.com or 321.345.3315





BMAP-RE, you can use ours and then just use those "quick release nuts" on another bolt on the ShuttleSlide mount. The larger composite piece of the quick release system will be bolted to the bottom of your trolling motor. Once the small quick release bracket is attached to the BMAP-RE, you can place the trolling motor on top.

After receiving the items, please let us know if you have any additional installation questions. We are always happy to help!

**The six 3/4" button head bolts are only used to attach the trolling motor directly to the sliding metal brackets. They are automatically included in every HD and UHD mounting kit. If you purchased the BMAP-RE adapter plate, you will not be bolting the trolling motor directly to the sliding brackets.

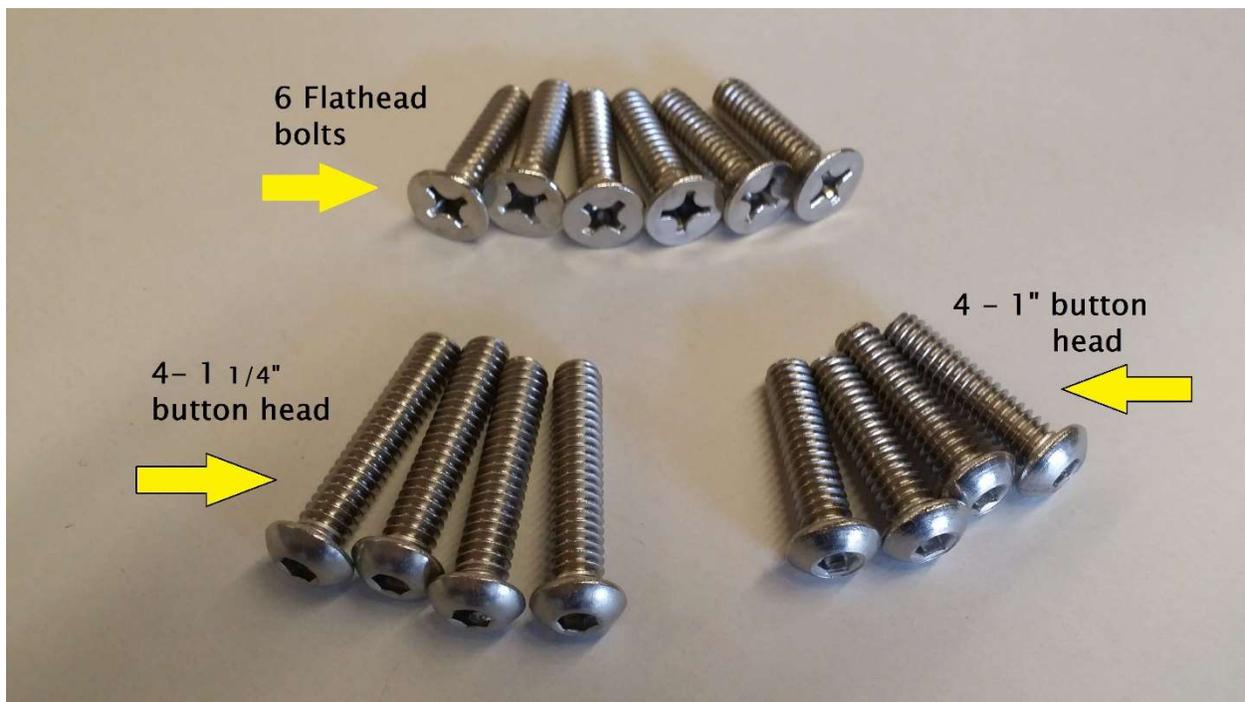

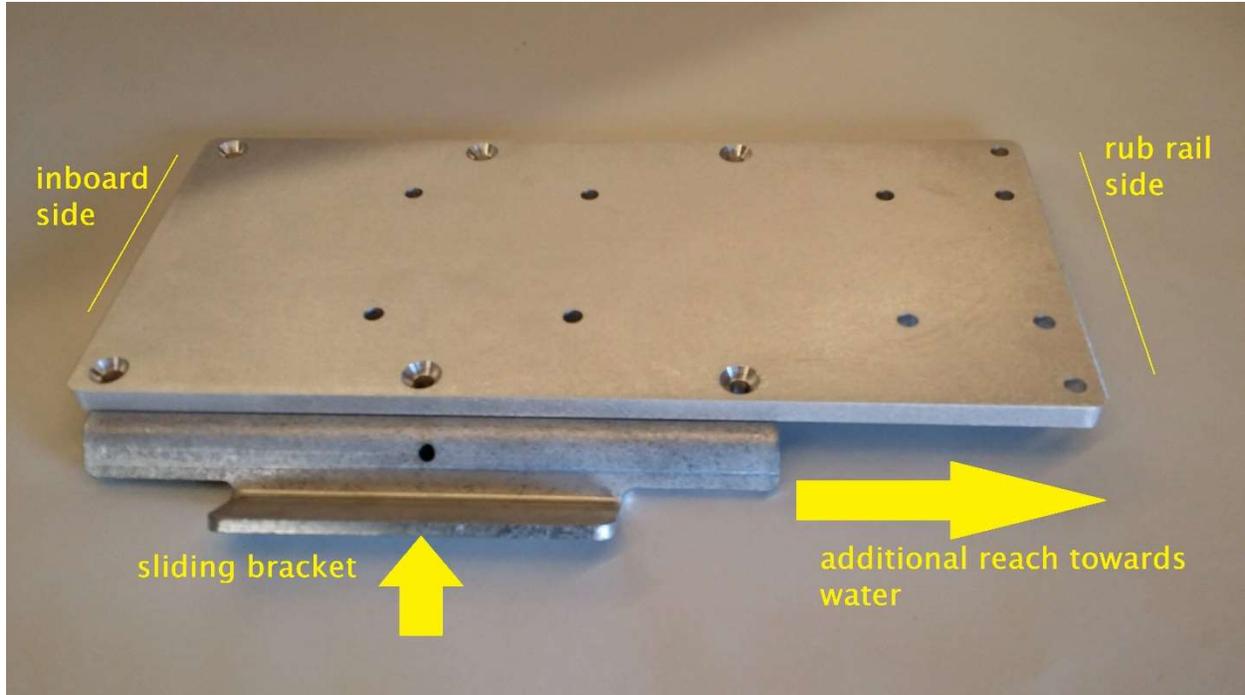

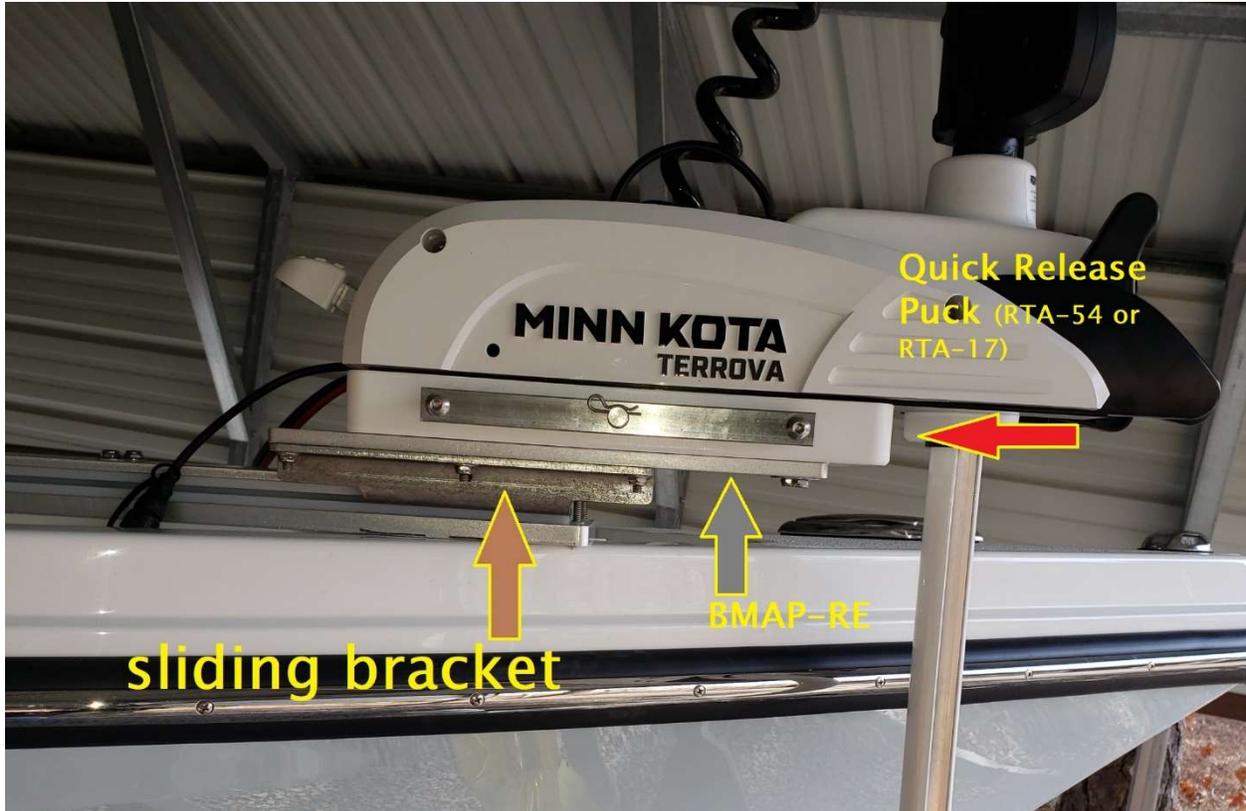



This picture shows how the BMAP-RE is attached directly to a trolling motor without using an additional quick release mount.